

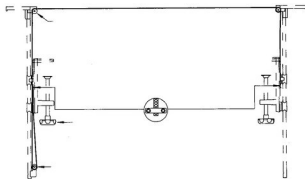


R1	Motor Housing	R65	Counter House Cap	R59	Card With Plug	R38	Blade Nut
R2	Stator	R66	Counter	R24	Screw	R39	Screw
R3	Bearing	R67	Screw	R25	Washer	R40	Face Plate
R4	Collar	R88	Screw	R26	Grind Wheel Base	R41	Safe Guard
R5	Rotor	R89	Washer	R97	Grind Wheel	R42	Screw
R90	Rotor Assembly	R18	Switch Corer	R93	Grind Wheel Shaft(Out)	R43	Screw
R6	Carbon Brush	R19	Switch	R31	Grind Wheel Front Base	R45	Balance Block
R7	Cap For Carbon Brush	R20	Switch Box Cover	R34	Screw	R46	Nut
R8	Screw For Stator	R21	Screw	R32	Spring	R47	Sphericity Nut
R9	Front Cover For Motor	R98	Handle Pin	R94	Grind Wheel Shaft(Inner)	R111	Screw
R10	Screw	R99	Handle Head	R95	Spring	R48	Screw
R11	Socket	R100	Handle(New)	R96	Grind Button	R49	Screw
R16	Socket Cap	R17	Handle(Old)	R91	Sharpening Assembly	R29	Lower Knife Base
R87	Screw	R17-1	Stainless Steel Plate	R35	Screw	R50	Screw
R12	Screw	R17-2	Screw	R44	Screw	R51	Lower Knife
R64	Counter House	R124	Washer	R36	Blade	R52	Base Plate
R54	Screw	R109	Screw	R37	Blade Washer	R53	Spring
R55	Collar	R22	Screw	R60	Cord Clamp	R63	Clamp Nut
R56	Bearing	R23	Screw	R61	Fix Screw	R122	Plastic Tube
R57	片Washer	R58	Shaft	R62	Clamp Screw	R181	Brush Sleeve

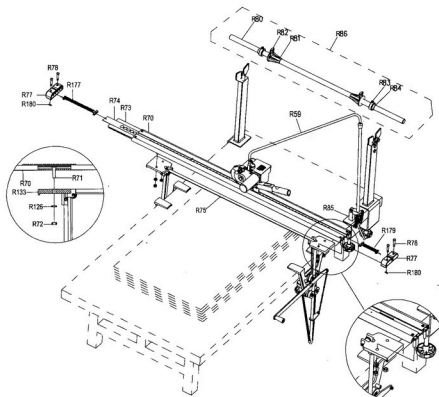

R70	Orbit	R75	Belt
R71	Screw	R179	Spring
R72	Nut	R85	Cord Holder Assembly
R126	Washer	R80	Fabric Holder
R73	Rubber	R81	Stopper
R74	Stainless Steel	R82	Screw Valve
R177	Spring	R83	Screw
R77	Plastic Stopper	R84	Position Sleeve
R78	Pin	R86	Fabric Holder Sets
R180	Pin	R133	Orbit Holder

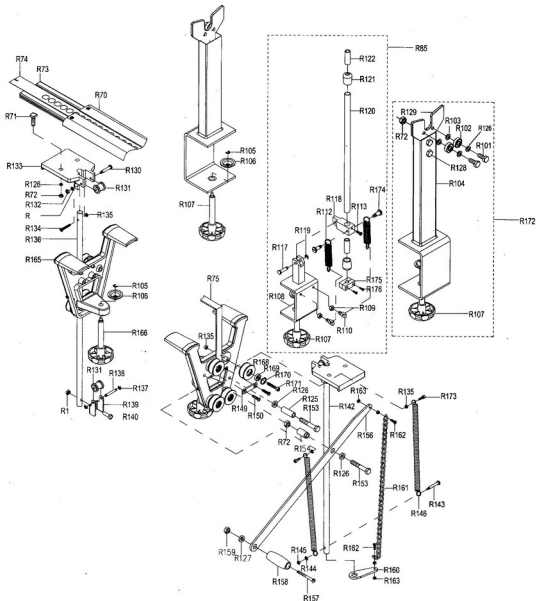

R131	Screw	R121	Cord Sleeve	R142	Lift Lever(Right)	R162	Screw
R172	Bearing	R125	Plastic Tube	R143	Pin	R163	Nut
R193	Washer	R127	Washer	R144	Washer	R165A	Holder
R194	Stand	R128	Screw	R145	Nut	R166A	Wheel
R135	Collar	R129	Fabric Holder Fork	R146	Spring	R168	Guide Wheel
R106	Lock Cap	R130	Pin	R149	Belt Press Block	R169	Bearing
R107	Lock Valve	R131	Guide Wheel	R150.	Screw	R170	Collar
R178	Crd Holder Lock Plate	R132	Nut	R153	Screw	R171	Screw
R110	Screw	R134	Screw	R154	Fix Sleeve	R172	Fabric Holder Assembly
R112	Spring	R135	Nut	R156	Lift Arm	R173	Screw
R113	Screw	R136	Lift Lever(Left)	R157	Screw	R174	Screw
R117	Pin	R137	Collar	R158	Lift Handle	R175	Cord Length Adjuster Clamp
R118	Crd Holder Block(Upper)	R138	Guide Wheel Pin	R159	Nut	R176	Screw
R119	Collar	R139	Guide Wheel Holder	R160	Lift Slider		
R120	Steel Tube	R140	Screw	R161	Lift Chain		